

MSD INSTALLATION INSTRUCTIONS

VACUUM ADVANCE LOCKOUT PLATE PN 88364

ONLINE PRODUCT REGISTRATION: Register your MSD product online. Registering your product will help if there is ever a warranty issued with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration

Parts Included:

- | | |
|----------------------------------|--------------------|
| 1 – Vacuum advance lockout plate | 2 – Phillip screws |
| 1 – Vacuum advance cover | |

LOCKING OUT THE VACUUM ADVANCE

1. Remove the distributor cap and rotor.
2. Remove the original vacuum advance canister screws (Figure 1).

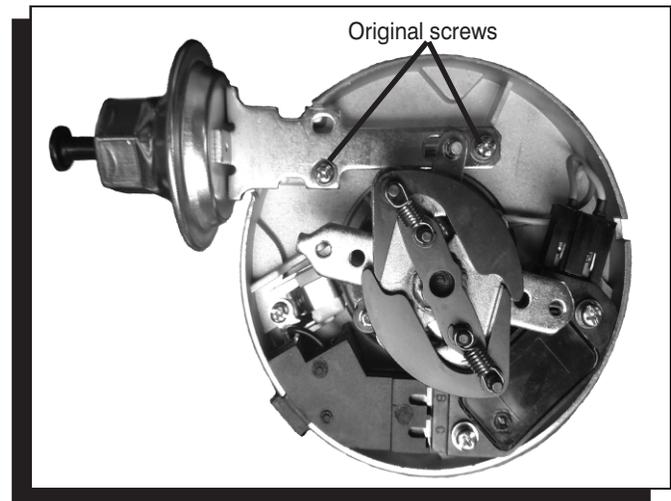


Figure 1.

3. Remove the vacuum advance canister and use a flathead screwdriver to release the vacuum linkage from the pickup. (Figure 2).

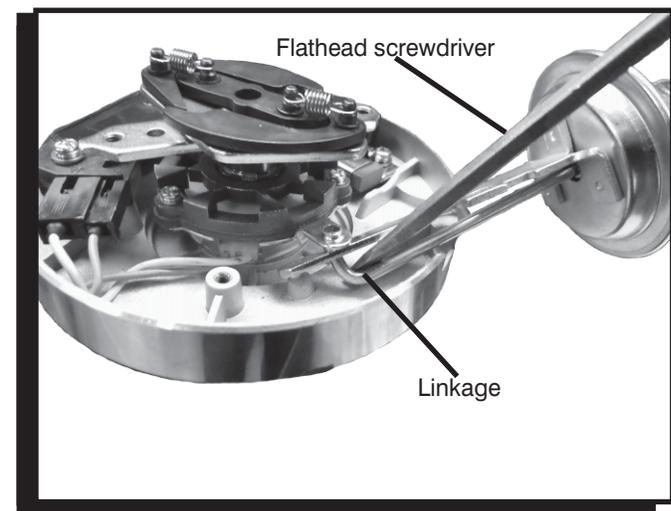


Figure 2.

4. Install the vacuum cover.
(Figure 3).



Figure 3.

5. Install the vacuum advance lockout plate.
(Figure 4).

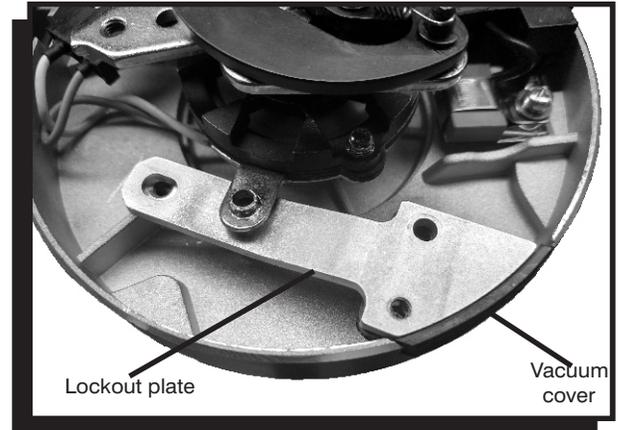


Figure 4.

***Note: It is recommended to apply blue loctite on all four screws.**

Due to variance in distributor housings, screws may need to be installed in different locations. See CASE 1 and CASE 2 below.

6. CASE 1. Re-use the original screws of the vacuum advance to secure the back part of the lockout plate to the distributor base and the pickup. Use the short and long provided screws to secure the cover and the front part of the lockout plate to the distributor base (Figure 5).

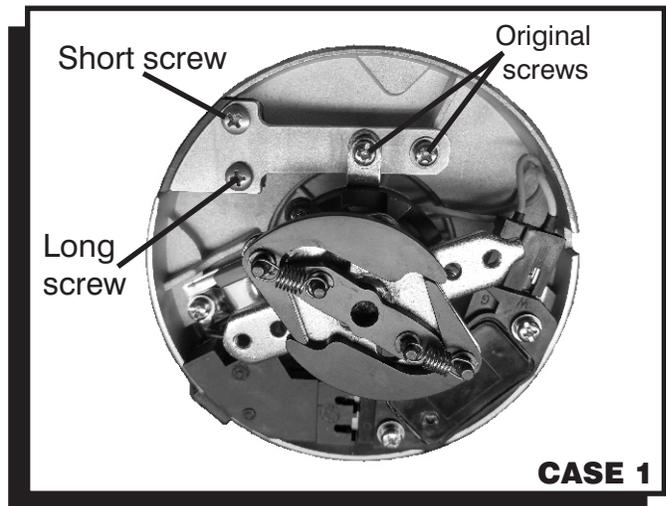


Figure 5.

7. CASE 2. Use the long screw provided to hold the pickup in place and one of the original screws to secure the lockout plate to the base of the distributor. (Figure 6).

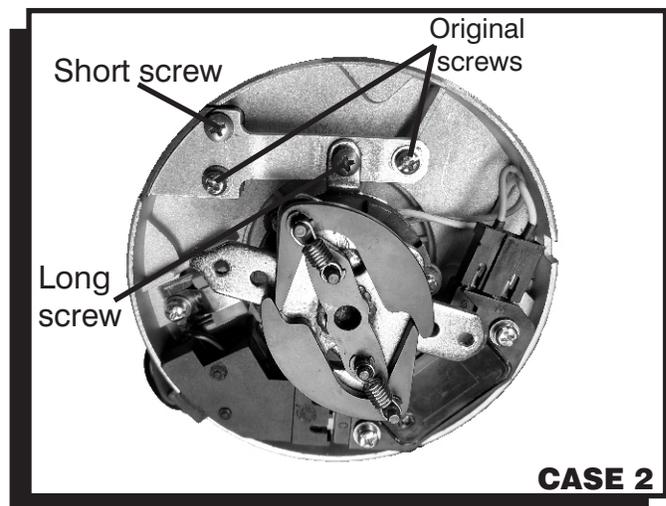


Figure 6.

